


FLAT-PAR 9 RGB Warm White

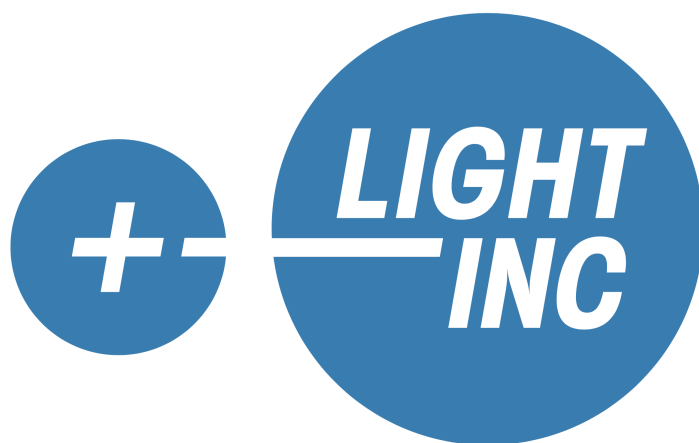

CONTENTS

- 1、 Important
- 2、 Installation guide
- 3、 Accessories
- 4、 Specifications
- 5、 Menu map
- 6、 Operation
- 7、 Maintenance

1、 Important!

- Please read this instruction carefully before installation.
- Check out all accessories after getting the product.
- Inspect the device carefully before installation in case of loose for transportation maintenance regularly.
- For guarantee the life of product , don't put it on the wet place and also not use it in the place over 40 degree.
- Don't put the product on the shakable place.
- Check the power supply voltage before turning on lamp. Power supply should not be over the voltage range. The lamp will be damaged if the voltage is too high, it can't work if the voltage is too low.
- After power off, if it is need used again, please cool down over 10 minutes.
- Disconnect the power before installation or removing. In case of malfunction, please ask the professional technician to repair.

2、 Installation guide

- Lift and hang up the lamps on a structure/truss through the hook clamps.
- Disconnect the power before installation .


3、 Accessories

- LED Par 1 pcs
- Remote control 1 pcs
- Manual instruction 1 pcs

4、 Specifications


- Input Voltage: 110 to 240 VAC, 50/60 Hz
- Light Source: 9 PCS RGB-WW 4W
- Power consumption: 38W
- Beam Angle: 25°
- DMX: DMX512
- DMX Channels: 4, 6 or 9
- IR remote control
- Sound Control
- Master-Slave
- Size: 200 X 150 X 73 mm
- Weight: 726g

5、Menu map

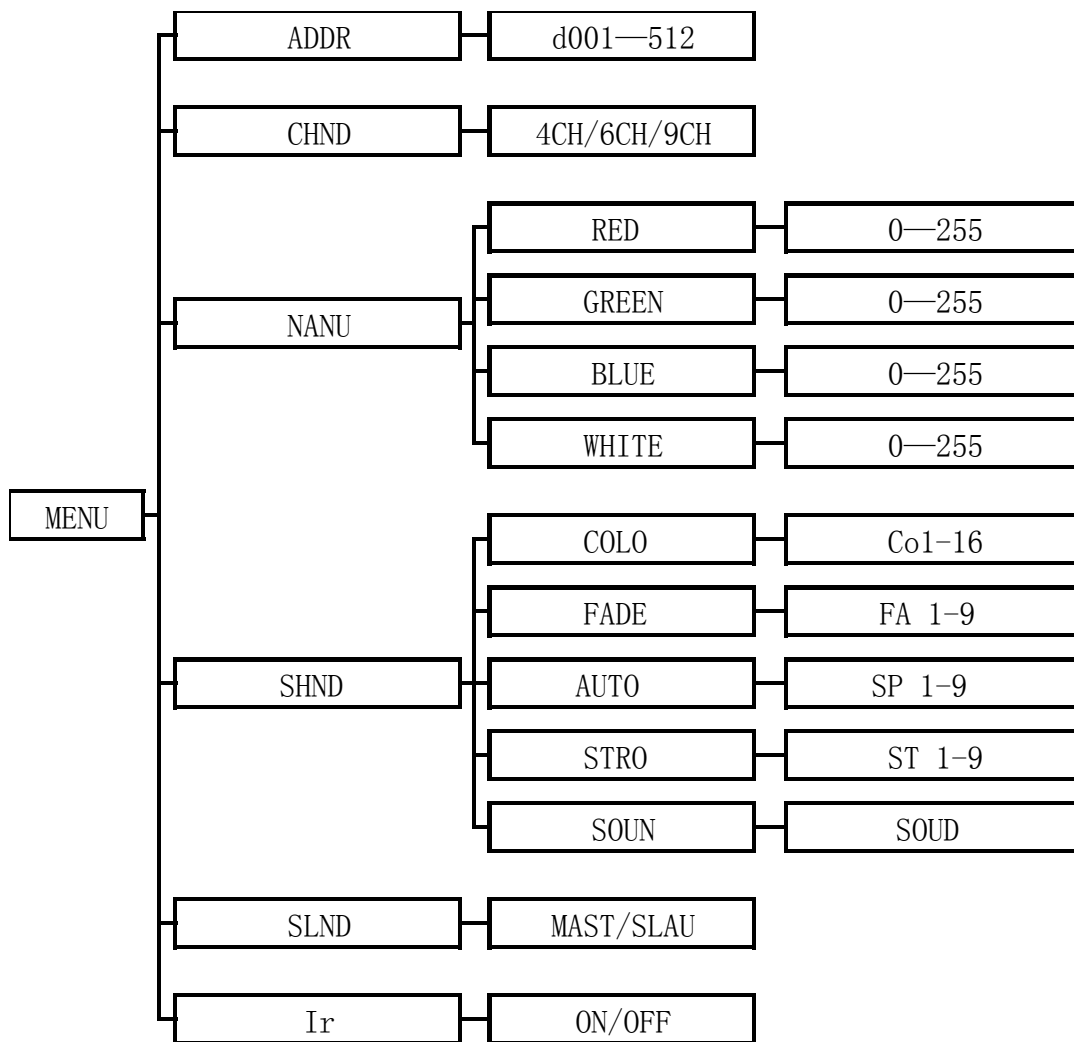

6、Operation

Keys diagram

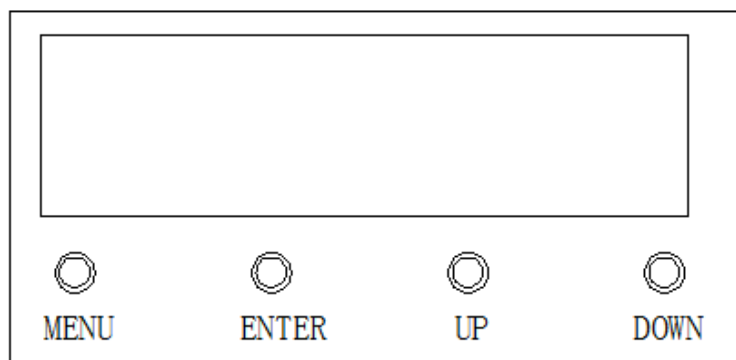

6.1 Master function

- 1、 Select “MAST ” from root directory menu.
- 2、 Select “MAST ”.

6.2 Brightness adjusting

- 1、 Select “STAT ” from root directory menu.
- 2、 Select “RED ”.
- 3、 Adjust the red brightness.
- 4、 Adjusting other color brightness by the same way.

6.3 Color function

- 1、 Select “PGRM ” from root directory menu.
- 2、 Select COLO”.
- 3、 Choose different colors.

6.4 Auto running function

- 1、 Select “PGRM ” from root directory menu .
- 2、 Select “AUTO” .
- 3、 Set up the running speed .

6.5 Fade function

- 1、 Select “PGRM ” from root directory menu.
- 2、 Select “FADE ”.
- 3、 Set up the fading speed.

6.6 Strobe function

- 1、 Select “PGRM ” from root directory menu.
- 2、 Select “STRO ”.
- 3、 Set up the strobe speed.

6.7 Sound function

- 1、 Select “PGRM ” from root directory menu.
- 2、 Select “SOUN ”.

6.8 Slave function

- 1、 Select “MAST ” from root directory menu.
- 2、 Select “SLAU ”.

6.9 4CH DMX function

- 1、 Select “CHND ” from root directory menu.
- 2、 Select “4CH ”.
- 3、 Select “ADDR ” from root directory menu.
- 4、 Set up the DMX address, the DMX address can be set to 001.

4CH DMX Table

Channel	Function	From	To	Feature
1	Red	0	255	Brightness 0—100%
2	Green	0	255	Brightness 0—100%
3	Blue	0	255	Brightness 0—100%
4	White	0	255	Brightness 0—100%

6.10 6CH DMX function

- 1、 Select “CHND ” from root directory menu .
- 2、 Select “4CH ” .
- 3、 Select “ADDR ” from root directory menu .
- 4、 Set up the DMX address, the DMX address can be set to 001 .

6CH DMX Table

Channel	Function	From	To	Feature
1	Dimmer	0	255	Master dimmer
2	Red	0	255	Brightness 0—100%
3	Green	0	255	Brightness 0—100%
4	Blue	0	255	Brightness 0—100%
5	White	0	255	Brightness 0—100%
6	Strobe	0	15	No function
		0	255	Strobe from slow to fast

6.11 9CH DMX function

- 1、 Select “CHND ” from root directory menu .
- 2、 Select “9CH ” .
- 3、 Select “ADDR ” from root directory menu .
- 4、 Set up the DMX address, the DMX address can be set to 001 .

9CH DMX Table

Channel	Function	From	To	Feature
1	Dimmer	0	255	Master dimmer
2	Red	0	255	Brightness 0—100%
3	Green	0	255	Brightness 0—100%
4	Blue	0	255	Brightness 0—100%
5	White	0	255	Brightness 0—100%
6	Strobe	0	15	No function
		0	255	Strobe from slow to fast
7	Auto	0	255	Running from slow to fast
8	Fade	0	255	Fading from slow to fast
9	Sound	0	9	No function
		10	69	Sound 1
		70	159	Sound 2
		160	255	Sound 3

6.11 IR remote control function

- 1、 Select “REMO ” from root directory menu .
- 2、 Select “ON ” .

※The significance of remote control keys

ON: Turn on all colors

OFF: Turn off all colors



Increase,increase speed, increase color brightness



Decrease,decrease speed, decrease color brightness

AUTO:Auto mode

FADE:Fade mode

STROBE:Color strobe

SOUND:Sound mode

COLOR:Color mode

MASTER:Master mode

SLAVE:Slave mode

Full:All color lighting

RED:Color red

GREEN:Color green

BLUE:Color blue

WHITE:Color white

AMBER:Color amber

UV:Color uv

DRG:Color orange

GYAN:Color sky blue

PINK:color pink

SHUT:switch on color /switch off color

ADDR:DMX mode address

CH:DMX channel

7、 Maintenance

- 1、 The lamps should be kept dry to avoid working in wet environment.
- 2、 Intermittent use can effectively extend the lamps life.
- 3、 Attention to clean the lamp usually in order to obtain good ventilation and lighting effects.
- 4、 Don't use alcohol or other organic solvents to clean the crust, avoiding to damage the product.